


S61 Outdoor Wireless Speaker

1. Product Overview

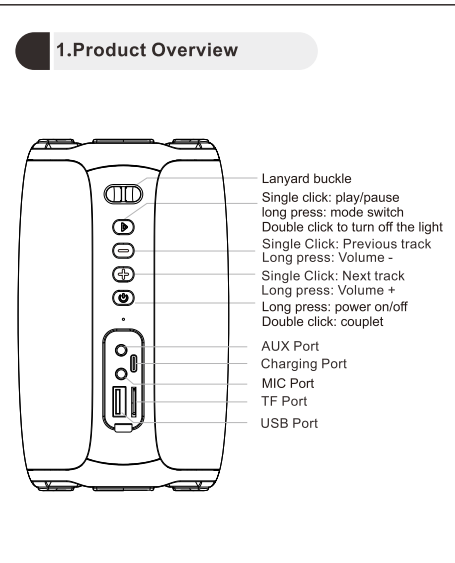


- Lanyard buckle
- Single click: play/pause
- long press: mode switch
- Double click to turn off the light
- Single Click: Previous track
- Long press: Volume -
- Single Click: Next track
- Long press: Volume +
- Long press: power on/off
- Double click: couplet
- AUX Port
- Charging Port
- MIC Port
- TF Port
- USB Port

2. Power On/Power Off

Long press "🔊" for three seconds, and you will hear a beep "Welcome to usezealot products" realizes booting.

3. Product function introduction

Mode switching sequence:
Bluetooth→Insert TF Card
→Audio Cable(AUX)→
USB→Radio

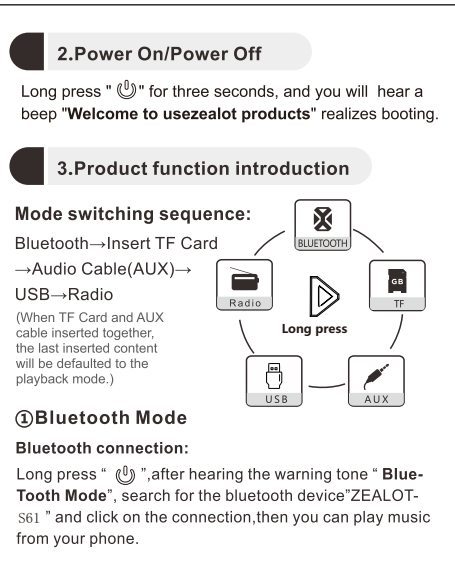

(When TF Card and AUX cable inserted together, the last inserted content will be defaulted to the playback mode.)

① Bluetooth Mode
Bluetooth connection:
Long press "🔊", after hearing the warning tone "Bluetooth Mode", search for the bluetooth device "ZEALOT-S61" and click on the connection, then you can play music from your phone.

② TF Card Mode
Insert TF card, It will play music from TF card after hearing the warning tone "Music Mode".

How to reconnect? 1. Your speakers will try to reconnect to the lost connection. 2. If the speaker does not attempt to reconnect, push the key to restart or manually reconnect via the phone's Bluetooth device menu.

Stereo Connect
When both machines are turned on and the distance is within 10m, double click on the 🔊 button of any machine to connect each other. After the first connection is successful and the subsequent connection will be automatic.

When incoming call:

- Single click "🔊": answer the phone;
- Long press "🔊": reject to answer the call;

When playing music:

- Single click "⏪, ⏩" button is switching the previous and next track;
- Long Press "⏪, ⏩" button is adjusting the volume;
- Single click "🔊" button is Play / Pause;

When playing music:

- Single click "⏪, ⏩" button is switching the previous and next track;
- Long Press "⏪, ⏩" button is adjusting the volume;
- Single click "🔊" button is Play / Pause;

⑤ Audio Mode

- Long press "🔊" button, switch to audio mode after hearing the warning tone "Radio Mode".
- Single click "🔊" button is searching channel automatically, after the search is completed, the first station searched will be played.
- Single click "⏪, ⏩" is adjusting the previous and the next broadcasting station;
- Long Press "⏪, ⏩" button is adjusting the volume. (Plug in the charging cable for better radio reception)

⑥ Light Colorful Mode
Double-click the "🔊" button to turn on/off the colorful lighting effects

⑦ Reverb Mode
Insert the 3.5mm microphone interface in Bluetooth mode TF card U disk FM mode, All have reverb function!

4. Product Specifications


Bluetooth version: 5.2 Speaker: φ66mm*1pcs
Transmission distance: about 10m
Frequency response: 20Hz-20KHz
S/N ratio: ≥85dB Working voltage: 3.7V
Distortion: <1% Charging voltage: DC5V
Weight: 670g Size: 98*98*163mm

6. Notice

- Do not throw this product into fire or water.
- Do not modify, repair or disassemble the speaker.
- Do not make it contact with combustible materials directly.
- Please keep the device away from damp and dusty environments.
- Before charging please check whether the charger model is suitable for this product.
- Do not use the Bluetooth function while charging.
- The device will automatically lose power when it's in standby, it's recommended to charge the speaker once a month.

Please keep your speaker and mobile phone within 10m working range.

Any wrong modification to the speaker may damage the speaker. Improper replacement of batteries can lead to an explosion hazard.



FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance, such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.



S61 Outdoor Wireless Speaker

一、产品概述



- 挂绳扣
- 单击:播放/暂停 长按:模式切换
- 双击:关灯
- 单击:上一曲/长按:音量-
- 单击:下一曲/长按:音量+
- 长按:开机/关机 双击:对联
- AUX端口
- 充电端口
- MIC 端口
- TF端口
- USB端口

二、开机/关机

长按 "🔊" 三秒, 听到提示音 "Welcome to use zealot products" 实现开机。

三、产品功能介绍

产品模式切换顺序:
蓝牙 → 插TF → 音频线 (AUX) → U盘 → FM收音 (其中TF卡, AUX模式为后插优先)



① 蓝牙模式
蓝牙连接:
长按 "🔊" 开机, 蓝灯闪烁, 听到提示音 "Bluetooth Mode", 搜索蓝牙设备 "ZEALOT-S61" 点击连接, 听到提示音, 蓝色指示灯长亮, 表示连接成功。

如何重新连接? 1. 您的音箱会尝试重新连接失去的连接。 2. 如果没有连上, 请进入手机蓝牙设置检查蓝牙是否已经打开。 3. IOS系统要提前打开蓝牙, 音箱才能自动连接, 否则要手动点击ZEALOT-S61 连接。

对联连接
在两台机器处于开机状态, 且距离在10m以内, 双击任意一台机器的 🔊 键, 即可实现对联互联。首次连接成功, 后续将会自动连接。

来电时:

- 单击 "🔊" 键为接听/挂断电话,
- 长按 "🔊" 键为拒接电话功能,

播放音乐时:

- 单击 "⏪, ⏩" 键切换上下曲;
- 长按 "⏪, ⏩" 调节音量大小;
- 单击 "🔊" 键暂停/播放。

② TF模式
插入TF卡, 听到提示音 "Music Mode" 播放TF卡内歌曲。

播放音乐时:

- 单击 "⏪, ⏩" 键切换上下曲;
- 长按 "⏪, ⏩" 调节音量大小;
- 单击 "🔊" 键暂停/播放。

③ AUX (音频) 模式
插入3.5mm音频线听到提示音 "Line in Mode" 切换至AUX模式, 即可播放手机、MP3、电脑中的音乐。

④ U盘模式
插入U盘, 听到提示音 "Music Mode", 可播放U盘里面的音乐。

播放音乐时:

- 单击 "⏪, ⏩" 键切换上下曲;
- 长按 "⏪, ⏩" 调节音量大小;
- 单击 "🔊" 键暂停/播放。

⑤ 收音模式

- 长按 "🔊" 键切换至收音模式, 听到提示音 "(Radio mode)"。
- 单击 "🔊" 为自动搜台, 搜索完毕收音机会播放搜到的第一个电台;
- 单击 "⏪, ⏩" 为调节上一个电台和下一个电台;
- 长按 "⏪, ⏩" 为调节音量大小功能。 (插入充电线能达到更好的收音效果)

⑥ 灯光炫彩模式
双击 "🔊" 键打开/关闭炫彩灯效

⑦ 混响功能
在蓝牙模式 / TF卡 / U盘 FM / 模式下插入 3.5mm接口麦克风, 都有混响功能!

四、产品规格

蓝牙版本: 5.2 扬声器: φ66mm*1pcs
传输距离: 约10m 频率响应: 20Hz-20KHz
信噪比: ≥85dB 工作电压: 3.7V
失真度: <1% 充电电压: DC5V
重量: 670g 尺寸: 98*98*163mm

五、充电

- 如果电池电量不足时, 会出现低电提示语音 "Low Battery Please Charge", 提示给产品充电。
- 将USB线分别插入适配器 (或电脑USB口) 及机身 Type-C 口, 充电时指示红灯亮, 充满电时灯熄灭。
- 不同的适配器、电脑USB的充电接口, 充电时间会因此不同。

六、注意事项

- 请勿将本产品投入火中。
- 请勿改装、修理或拆解设备。
- 请勿使其直接接触易燃物。
- 请使设备远离潮湿和充满灰尘的环境。
- 充电前请先检查充电器的型号是否适用本产品。
- 在充电过程不能使用蓝牙功能。
- 本产品在搁置时会自动流失电量, 建议每个月给音箱充电一次。

保持在您的手机10米范围内使用!

任何未经明确同意的更改或改装均可能导致用户丧失对设备的操作权限。替换电池不当可能会有爆炸危险。

