

成品尺寸	80*100mm
展开图尺寸:	800x100mm
公差:	±1mm

单位:mm

Smart Battery Doorbell

Please read the manual carefully before use

Product description

Packing list

- Smart Battery Doorbell*1
- Chime*1
- User's Manual*1
- Disassembly needle*1
- Power cord*1
- Wire jumper*1
- AC Power extension cord*2
- Screw Hole Positioning Card*1
- 3M Tape*1
- Mounting Bracket*1
- Screw pack*1

Doorbell Status Light

Blue Light
Waiting for network connection—Blue light slowly blinks
Network connection failed—Blue light quickly blinks
Motion detected/door call—Blue light breath
OTA Upgrading—Blue light slowly blinks
Normal standby—Blue light off
Doorbell malfunction—Blue light is always on

Green Light
Charging—Green light is always on
Charging completed—Green light off
Charging abnormal—Green light quickly blinks

Doorbell Prompt Tone

- After the doorbell is power on or reset, the doorbell will play "Please connect the router"
- Turn on the message function in the settings, the doorbell call is unanswered, the doorbell will play "please leave a message after the tone"
- Start message will play "start message"
- message end will play "message end"
- The doorbell is low power and will shut down, the doorbell will play "Low battery, will shut down soon"

Disassembling the doorbell charging instructions

- Insert the disassembly needle into the hole and press down firmly, as shown 1.
- Pull out the doorbell forward, as shown 2.
- Plug in the USB cable to charge.

Basic Operations

Power on : Long Press "Switch Button" for 2 seconds
Power off : Press the "Switch Button" 3 times within 2 seconds
Reset : Long Press "Switch Button" for 5 seconds

Preparation for use

- When you get this product, please turn on the device first use the configured power cord to fully charge the device; At the same time, make sure that the phone is connected to a Wi-Fi network in the 2.4GHz frequency band.
- Download and open the App; Search for "Smart Life" in the app store or scan the Download and install the App by QR code; For the first download and use, please click the "register" button to register an account; if you already have an account, click "Login" button.

Configure Doorbell

- Long press "Switch Button" for 2s to turn on the doorbell, then long press "Switch Button" for 5s, the doorbell will sound "Please connect the router".
- Click on the Wi-Fi and enter password.
- Turn on the WiFi and Bluetooth of your phone and allow permission for "Smart Life". Then open the "Smart Life" APP. The first time you use this APP, you need to register an account.

1. when you enter the APP, the doorbell will automatically popup to add. If not popup, you can tap "Add Device" the doorbell will be displayed at the top of the interface.

2. Tap "+" to add the doorbell.

Chime Connect

Enter the doorbell setting interface, find the chime setting, and follow the steps to connect the chime.

Step 1: Click on chime setting, and click on connecting the chime, then click on connect

Step 2: Operate the chime according to the prompts

Step 3: Press the doorbell button to pairing with chime

Step 4: Check connecting status

Find a Mounting Spot

Take the video doorbell to your front door and check the live view on the App at the same time. Find a location where you can get the desired field of view. Consider the below factors:

- Check if you can reuse the existing holes and anchors on the wall or door frame.
- If you want to place the doorbell close to a side wall, make sure the wall doesn't show up in the field of view. Otherwise IR light will be reflected and night vision will become blurry.
- If you are drilling the mounting holes for the first time, the recommended mounting height is 48"/1.2m from the ground.
- If you use the package detection function, the package is recommended to be placed at a distance of 0.5 meters from the wall.

Installation Notes

Mounting Screws/Box: Use two to mount the Bracket on the wall, and another for backup that Anchorage (do not drill holes in the hole you drill in the wall when making on concrete, brick or stone, or brick you should, and another for backup.

Terminal Screws/Box: Tighten two terminal screws after attaching the wires to the terminals on the rear of your Smart Doorbell, and another for backup.

Extension Wires and Wire Nuts: If the doorbell wires are too short, use the Extension Wire and Wire Nuts to extend them.

Jumper for Original Chime: The jumper cable to connect both terminals in your existing doorbell chime.

Install your Smart Doorbell 1

Powering the doorbell with existing doorbell wires

Step 1: Ring the existing doorbell to check if it is working. If the doorbell doesn't ring, your doorbell wires may be defective, you can consult an electrician to fix the wires.

Step 2: Shut off power at the breaker. Turn the lights on/off in your home to make sure the electricity in your house is properly shut off.

Step 3: Use the provided jumper cable to connect both terminals in your existing doorbell's chime.

Step 4: Uninstall your existing doorbell from the wall. Pull the two wires out carefully when removing the existing doorbell. Straighten the wire ends if necessary.

Step 5: Install Wall Anchors (Optional)

- If you're installing on a hard surface such as concrete, stucco, or brick, use outside tools to drill two holes in your wall, and push the provided anchors into these holes.
- If you're installing on wood, ignore this step.

Step 6: Mount your Bracket on the Wall with Mounting Screws;

Step 7: Connect the Wires to Smart Doorbell with Terminal Screws;

- If your doorbell wires too short, use the Wire Extenders and Wire Nuts to extend them.

Step 8: Mount the doorbell on the bracket. Align the doorbell on bottom and then push up, then snap it on the top.

Install your Smart Doorbell 2

Wireless Installation

Step 1: If you don't want to drill holes in the wall, you can use 3M tape to mount the doorbell

Step 2: Tear off one side of the 3M tape protective film and stick it on the bracket.

Step 4: Mount the doorbell on the bracket. Align the doorbell on bottom and then push up, then snap it on the top.

Step 5: Tear off the other side of the 3M tape protective film and stick the bracket on the wall.

Step 4: Mount the doorbell on the bracket. Align the doorbell on bottom and then push up, then snap it on the top.

FAQ

Q: APP can't find my doorbell.
A: Please power on your doorbell, turn on the Bluetooth of your phone and allow permission for "Smart Life" APP.

Q: Doorbell could not connect Wi-Fi.
A: Please check whether the Wi-Fi signal is sufficient, the doorbell only supports 2.4GHz Wi-Fi, not 5GHz, please make sure your Wi-Fi password is correct, and the password does not support special symbols.

Q: Device list is prompted device is offline.
A: Please make sure Wi-Fi connection is correct. If doorbell is connected to the Internet, please check the strength of wireless signal.

Q: What should I do if my mobile phone does not receive doorbell's push.
A: Please check if doorbell's motion detect is turned on and the alarm settings are correct. Then check APP's push permission on your mobile phone.

Q: I have reset my doorbell, I cannot connect my doorbell again.
A: Please remove your device in your APP, then you reset your doorbell. Reset directly without uninstalling the APP is invalid.

Q: Memory card is invalid.
A: Doorbell supports up to 128G micro SD card.

Technical Specifications

Doorbell

- Operating Temperature: -20°C ~ 50°C, Operating humidity: 10%~95% No condensation
- Notes: The maximum normal condition operating temperature is defined as +50°C except battery charging condition. The maximum battery charger temperature is defined as 44°C.
- Frequency Range: 2.412~2.472GHz, WiFi RF Output Power: 1750mW, 433 RF Output Power: <20mW
- Power: AC 8-24V ~ 50/60Hz 200mA and general 5V Direct Current 1.5A, symbol --- means direct current

Chime

- Operating Temperature: -10°C to 45°C ; Operating Humidity: <90% at 40°C
- Communication : RF 433MHz
- Power :100-240V~50/60Hz; Symbol ~ means alternating current
- Indoor use, bathroom excluded; Symbol □ means for indoor use only
- Symbol □ means Class II product-Double Insulated -No earth required

warning

Federal Communications Commission (FCC) Declaration of Conformity

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: —Reorient or relocate the receiving antenna. —Increase the separation between the equipment and receiver. —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. —Consult the dealer or an experienced radio/TV technician for help. Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Declaration Of Conformity European Notice

Hereby, Zhejiang Linghu Technology Co., Ltd. declares that this product is in compliance with essential requirements and other relevant provisions of Directive 2014/53/EU, 2011/65/EU.

This product must not be disposed of as normal household waste. In accordance with EU directive for waste electrical and electronic equipment (WEEE-2012/19/EU), instead, it should be disposed of by returning it to the point of sale, or to a municipal recycling collection point. The device could be used with a separation distance of 20cm to the human body.

- Never used the appliance and its battery in extreme conditions (high or low extreme temperatures, high altitude...) during use, storage or transportation.
- Warning: Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Never damage the appliance and its battery.
- Never short circuit the battery.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

版本	物料编号	变更者	变更时间	版本升级原因描述
1.0				原始版本

材质	105g铜版纸	客户 中性	产品名称	门铃	物料名称 SC162-WCD3-门铃-中性-英文-说明书	设计	大川
印刷色	四色印刷		型号	SC162-WCD3		审核	张路路
加工工艺	风琴10折页		物料编号			时间	20240325
接合方式							