

正面

SARGO®山狗®
Because it's there

Thumb Camera User Manual
Please read this manual carefully before use

Notices

1. Waterproof Attention: When the camera is equipped with a waterproof case, it supports waterproofing up to 30 meters. Before diving, please ensure the waterproof case is tightly sealed. After returning ashore, wipe the waterproof case and then perform a waterproof test: it is recommended to place a tissue inside the waterproof case and submerge it in water for testing before using the waterproof case.


2. Memory Card: The camera itself does not come with internal memory and requires a high-speed memory card. G10 supports up to 128GB, while G10+ supports up to 256GB.

3. Temperature Note: Digital cameras will emit higher heat during use, which is normal and does not affect operation.

4. Charging Instructions: The camera requires a standard 5V1A-2A charger for charging. Fast chargers are prohibited.

5. Battery Life: The camera's battery life may vary due to usage environment and personal habits. It is recommended to fully charge the camera upon receiving it.

Operating Instructions

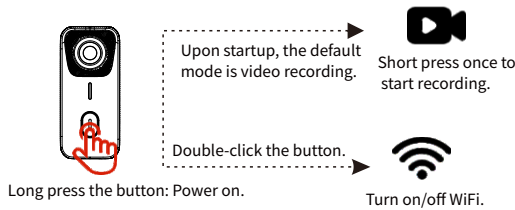

Status	Operation Steps	Indicator Status
Power On	Long press the button to power on.	Vibrates twice, blue light stays on.
Power Off	Long press the button to power off.	Vibrates twice, indicator light turns off.
No Card/Card Error	Automatically powers off after 10 minutes without a card.	Vibrates five times, red light flashes rapidly 10 times before turning off.
Recording Mode	In power-on state, short press the button to start recording. Short press again to pause recording.	Vibrates once, blue light flashes.
Turn on WiFi	Quickly press the button twice to turn on WiFi.	Vibrates once, blue light stays on + yellow/green light flashes steadily.
Turn off WiFi	Quickly press the button twice to turn on WiFi.	Vibrates once, blue light stays on.
WiFi successfully connected	/	Blue light + yellow/green light stays on.
Recording in WiFi mode	/	Blue light + yellow/green light stays on.
Machine Charging	/	Red light stays on.
Power On in Charging Mode	/	Red light + blue light stays on.
Recording in Charging Mode	/	Red light stays on + blue light flashes.
Battery Fully Charged	/	Red light turns off.
Low Battery Warning	Powers off after red light flashes.	Vibrates twice, red light flashes 10 times.

WiFi Connection

Step One: Scan the QR code to enter the public account. Follow the prompts to download the software and install it.

Step Two: Double-click the camera button to activate WiFi. WiFi Name: G10** WiFi Password: 12345678

Step Three: Open the software, click "Add Device," enter the phone's WiFi connection interface, find the camera's WiFi name, click and enter the password to successfully connect. If prompted that WiFi cannot access the internet, click "Use" to proceed.

Step Four: Once WiFi connection is successful, return to the software, click to enter the device, and you can see the real-time image. You can also control the camera or adjust related parameters through the software.

Step Five: In the software's album, you can view photos and videos taken by the camera and download them to your phone. Downloading does not require mobile data.

Step Six: Double-click the camera button to exit WiFi mode.

Scan the QR code to follow the public account for usage tutorials.



Warranty Card

Purchase ID: _____ Contact Number: _____

Reason for Return/Exchange: _____

Reason for Repair: _____



Warranty Terms

Warranty service is only applicable within the valid warranty period under normal usage conditions.

Faults caused by product quality issues, excluding human factors, are eligible for warranty.

Within 7 days from the date of purchase, free return/exchange is supported by this store (provided it does not affect secondary sales).

Within one year from the date of purchase, one-time warranty is provided for faults not caused by human factors.

For repairs required beyond the warranty period or not covered by the warranty, our company reserves the right to charge repair fees at our discretion.

红色虚线位置作锯齿易撕条效果

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement
The device has been evaluated to meet general RF exposure requirement. in portable exposure condition without restriction.