 



802.11ax-HE80 – Ant 3

Channel 215 (7025MHz)

The Reference Level

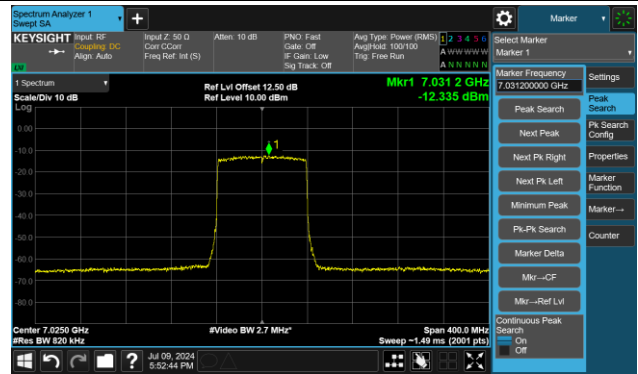

 
The Mask Data

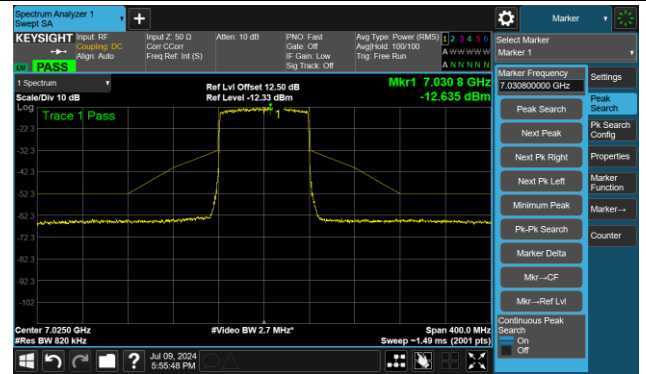


802.11ax-HE160 – Ant 3

Channel 15 (6025MHz)

 The Reference Level

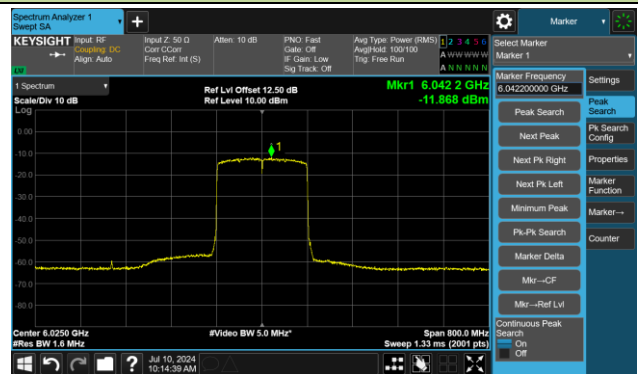


The Mask Data

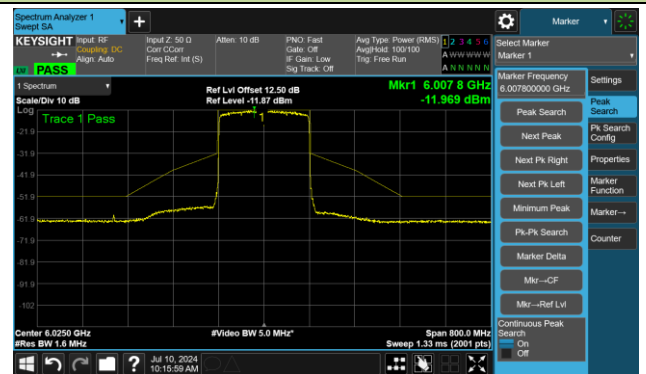 


Channel 47 (6185MHz)

 The Reference Level

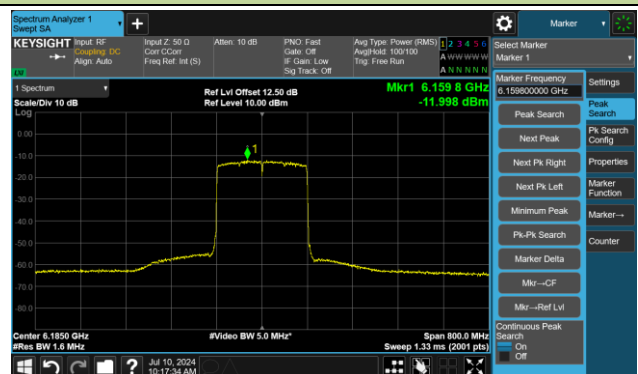


The Mask Data

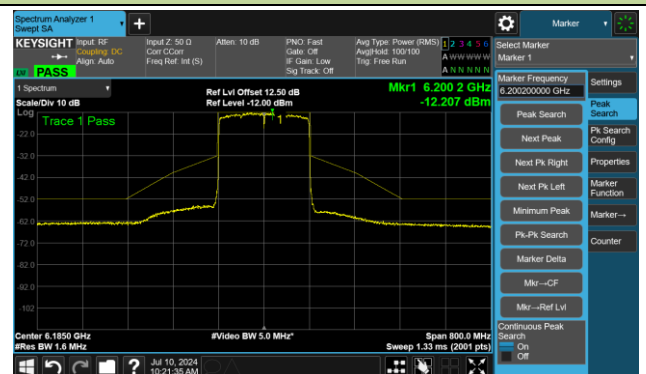 


802.11ax-HE160 – Ant 3

Channel 79 (6345MHz)

 The Reference Level

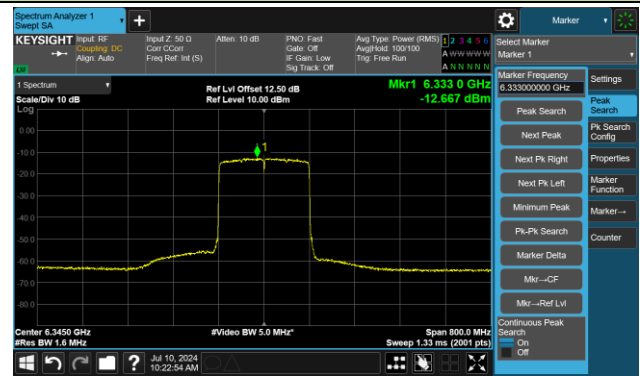


The Mask Data

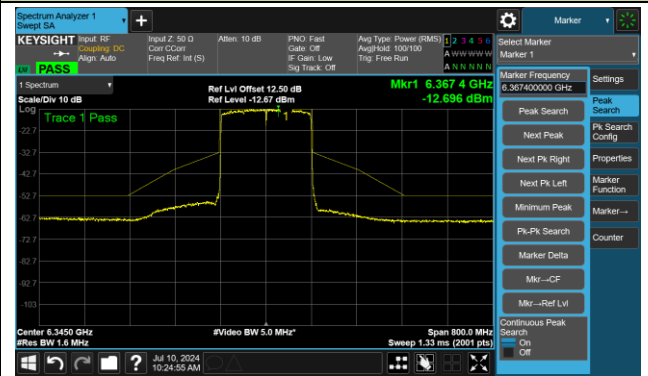 


Channel 111 (6505MHz)

 The Reference Level

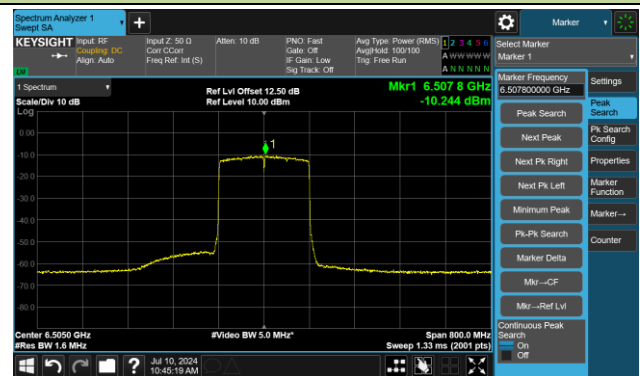


The Mask Data

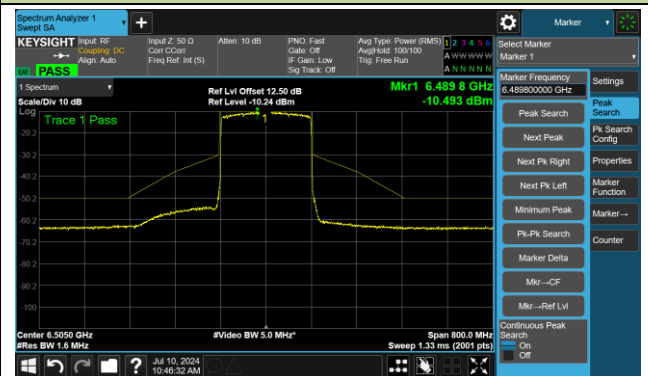 


Channel 143 (6665MHz)

 The Reference Level

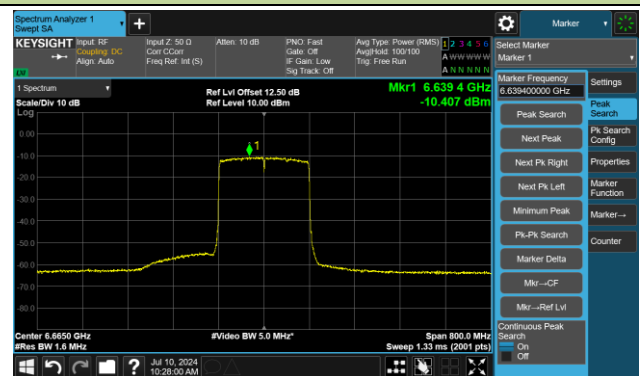


The Mask Data

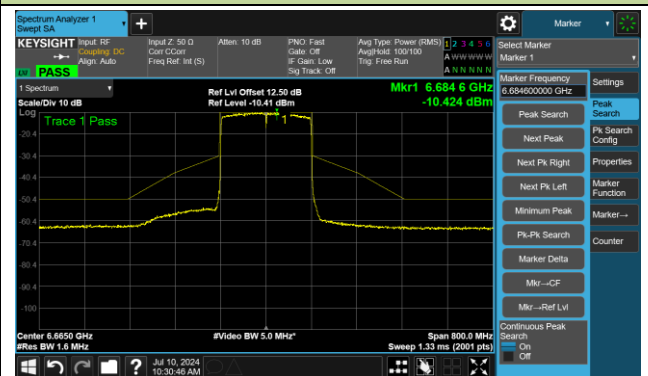 


802.11ax-HE160 – Ant 3

Channel 175 (6825MHz)

 The Reference Level

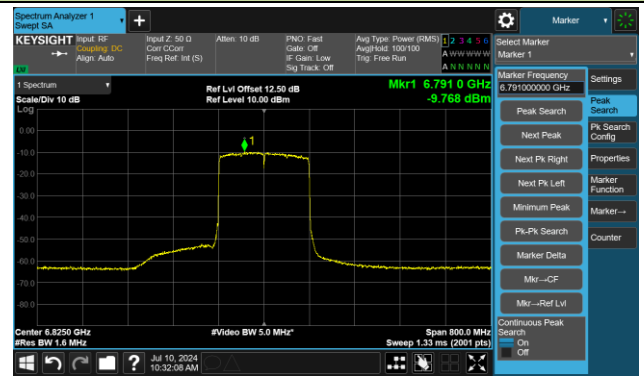


The Mask Data

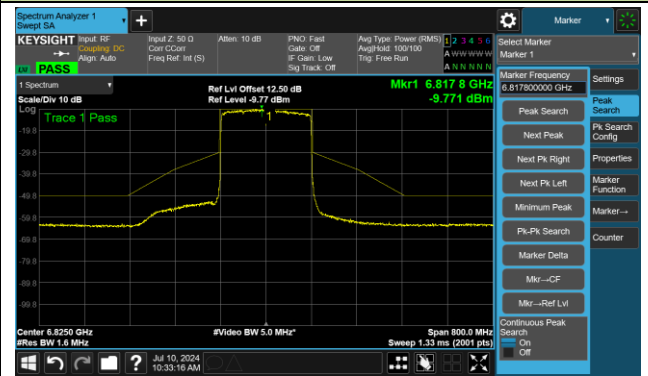 


Channel 207 (6985MHz)

 The Reference Level

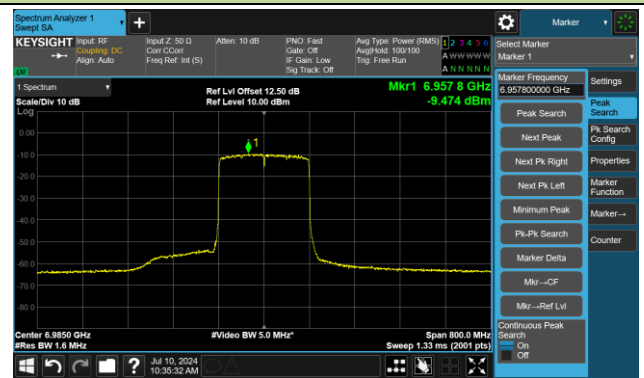


The Mask Data

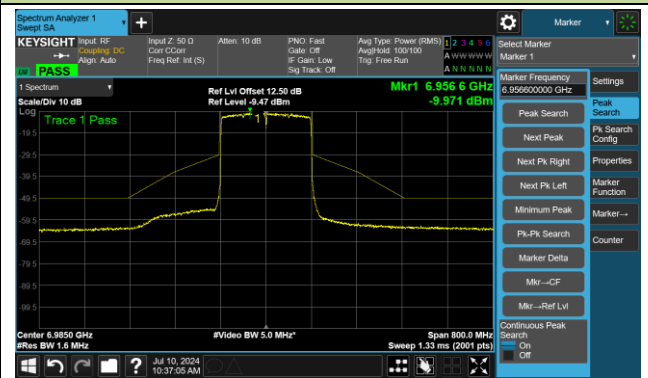 


802.11ax-HE20 – Ant 2

Channel 1 (5955MHz)

 The Reference Level

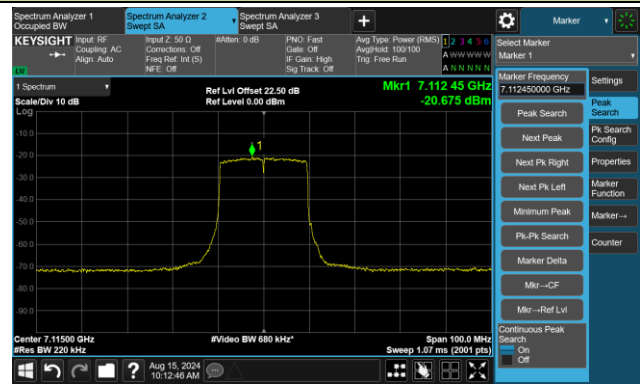


The Mask Data

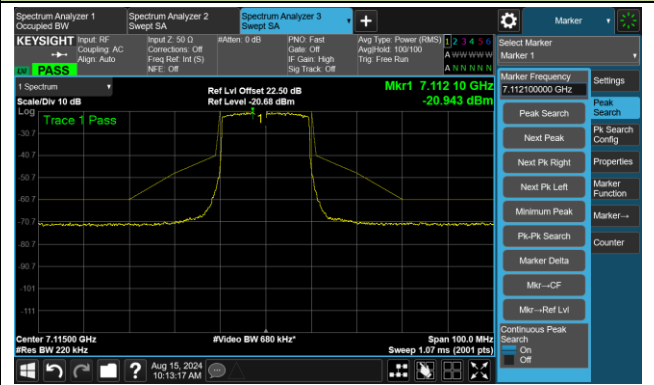 


Channel 49 (6195MHz)

 The Reference Level

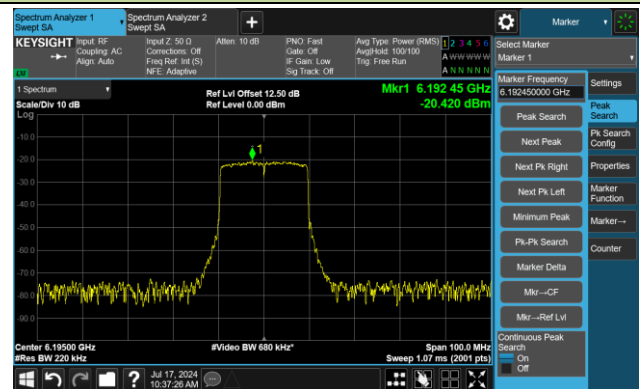


The Mask Data

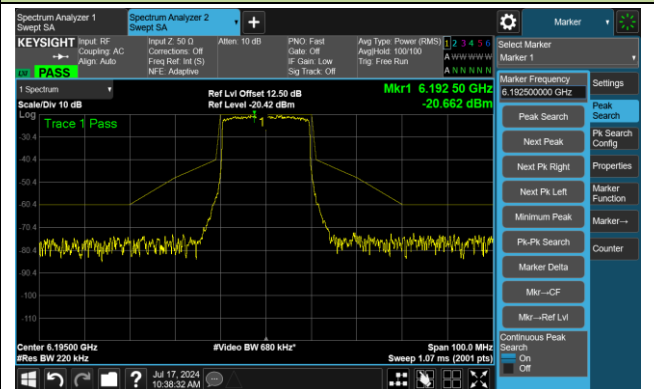 


Channel 93 (6415MHz)

 The Reference Level

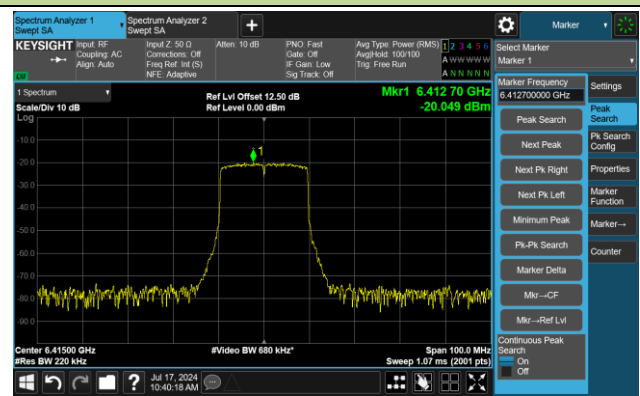


The Mask Data

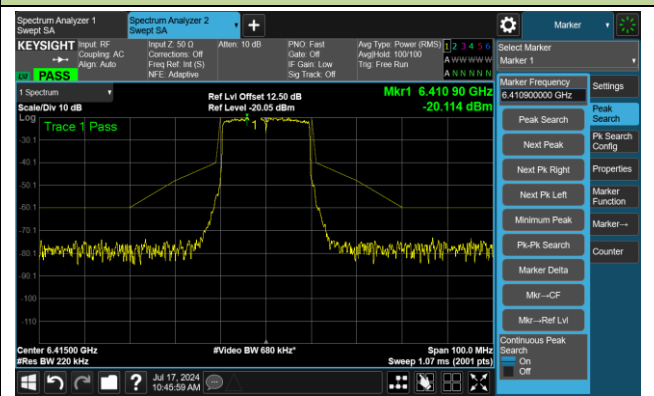 


802.11ax-HE20 – Ant 2

Channel 97 (6435MHz)

 The Reference Level

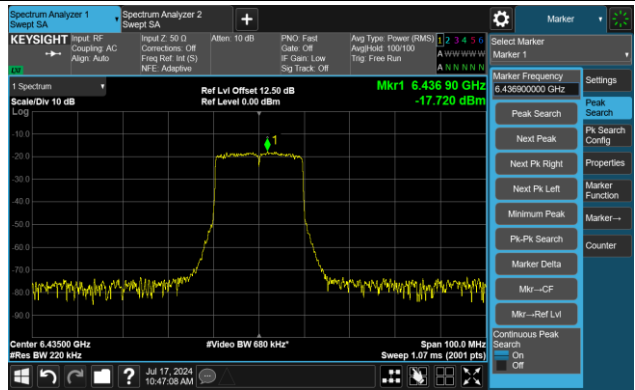


The Mask Data

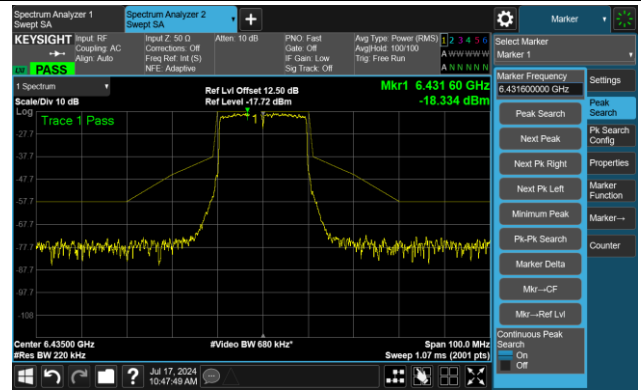 

Channel 105 (6475MHz)

 The Reference Level

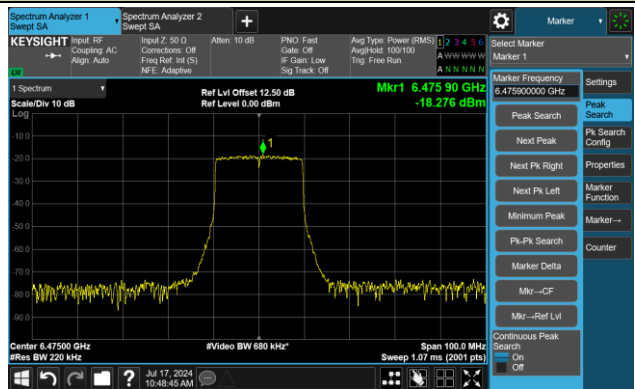


The Mask Data




Channel 113 (6515MHz)

 The Reference Level

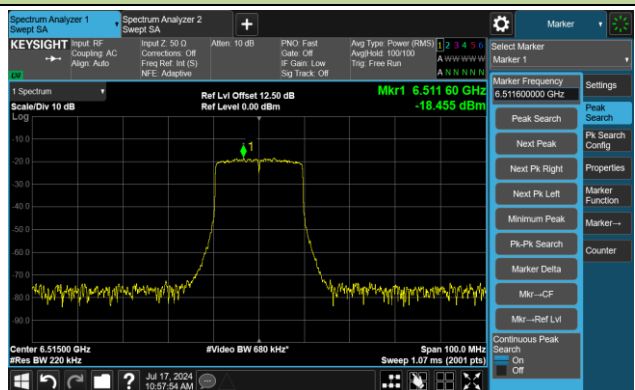


The Mask Data

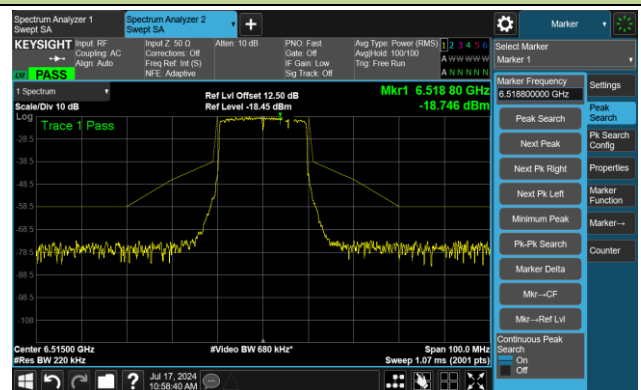 


802.11ax-HE20 – Ant 2

Channel 117 (6535MHz)

 The Reference Level

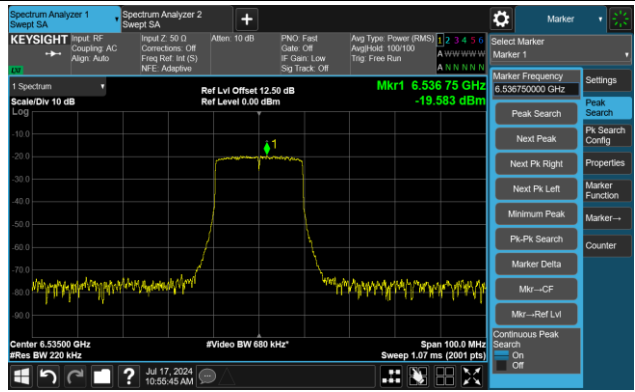


The Mask Data

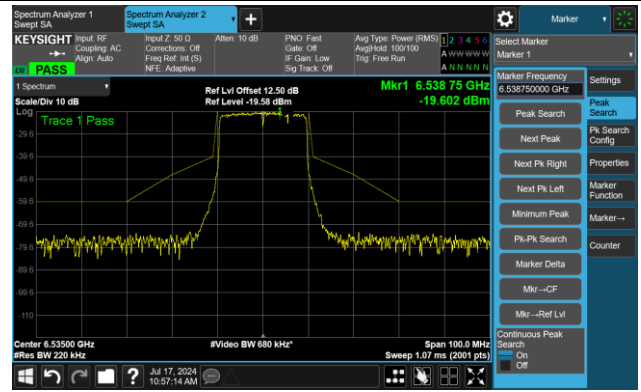 


Channel 149 (6695MHz)

 The Reference Level

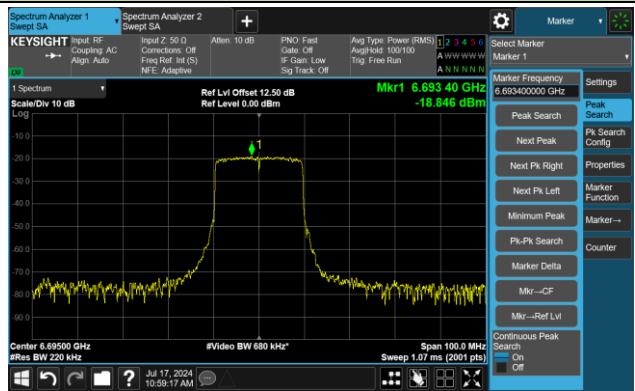


The Mask Data

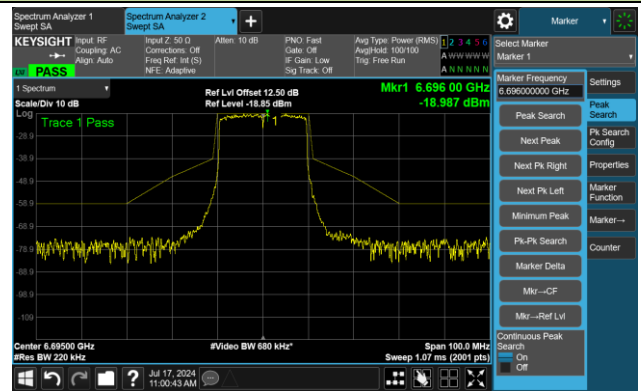 


Channel 181 (6855MHz)

 The Reference Level

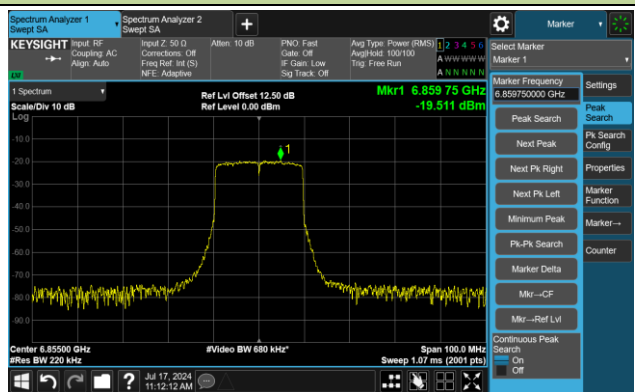


The Mask Data

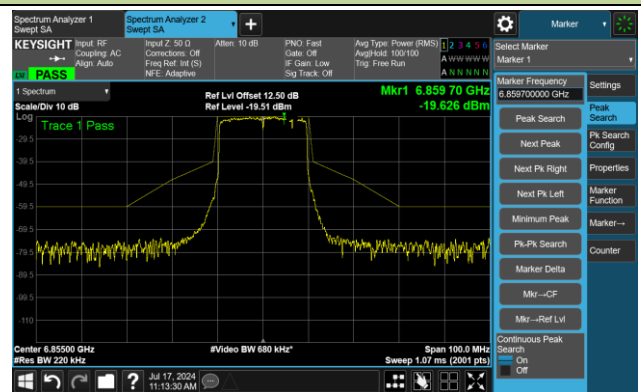 


802.11ax-HE20 – Ant 2

Channel 185 (6875MHz)

 The Reference Level

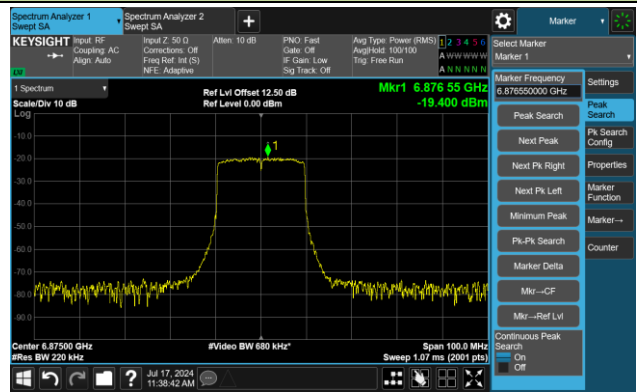


The Mask Data

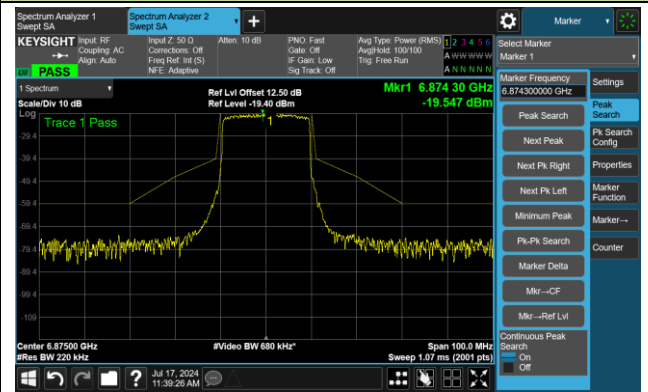 


Channel 189 (6895MHz)

 The Reference Level

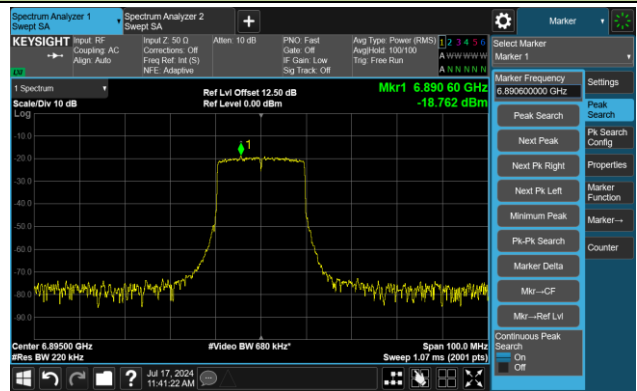


The Mask Data

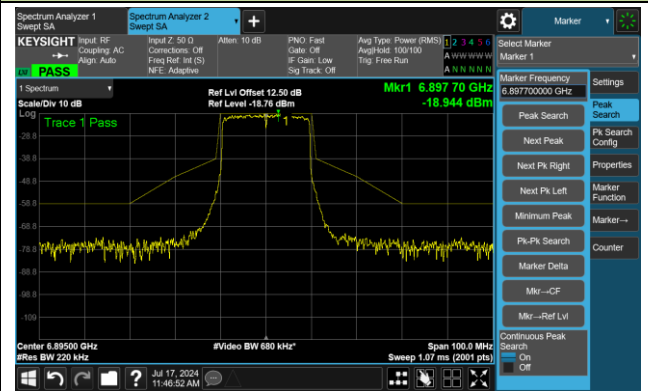 


Channel 209 (6995MHz)

 The Reference Level

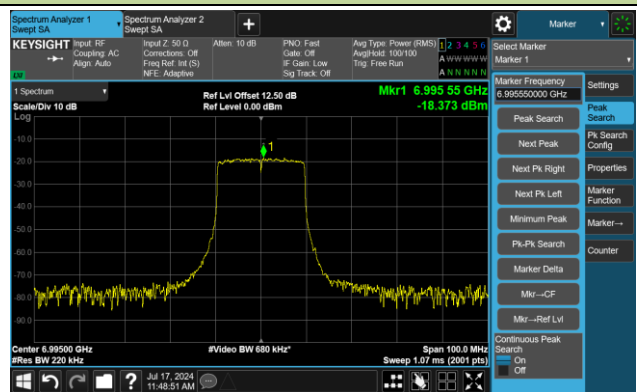


The Mask Data

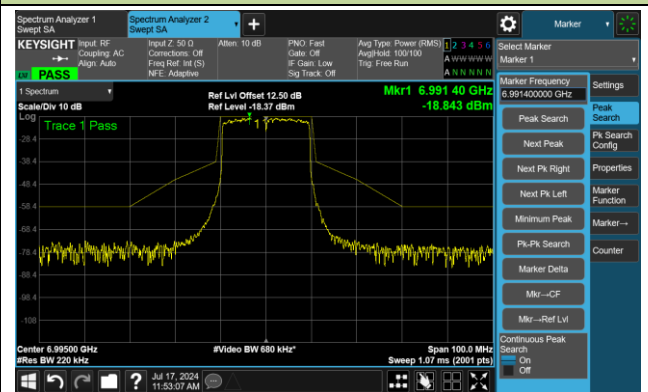 


802.11ax-HE20 – Ant 2

Channel 233 (7115MHz)

 The Reference Level

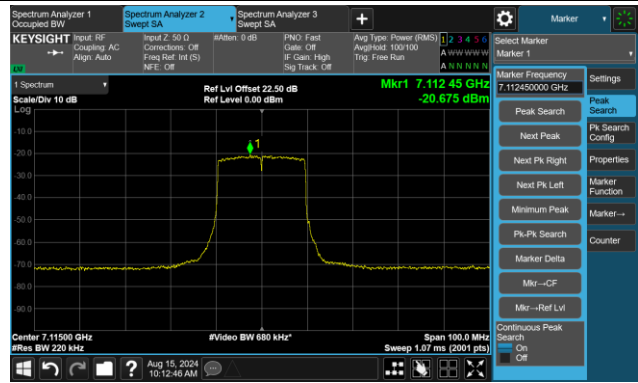


The Mask Data

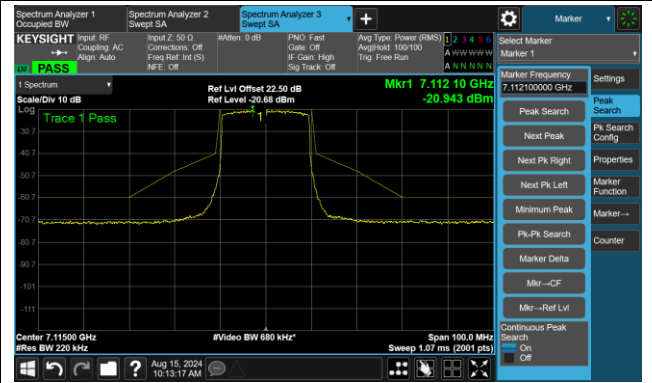 


802.11ax-HE40 – Ant 2

Channel 3 (5965MHz)

 The Reference Level

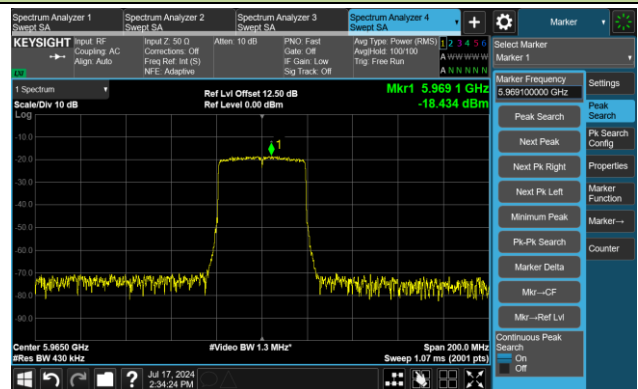


The Mask Data

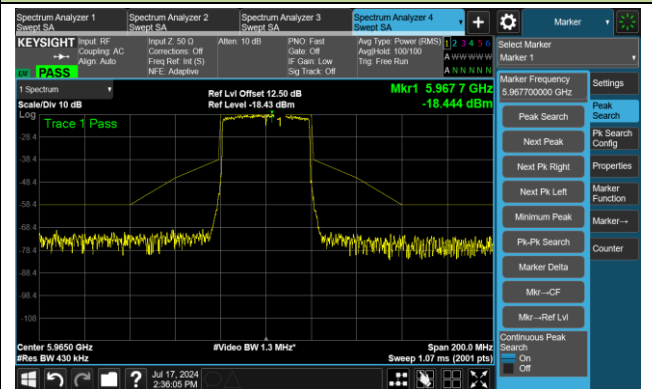 


Channel 51 (6205MHz)

 The Reference Level

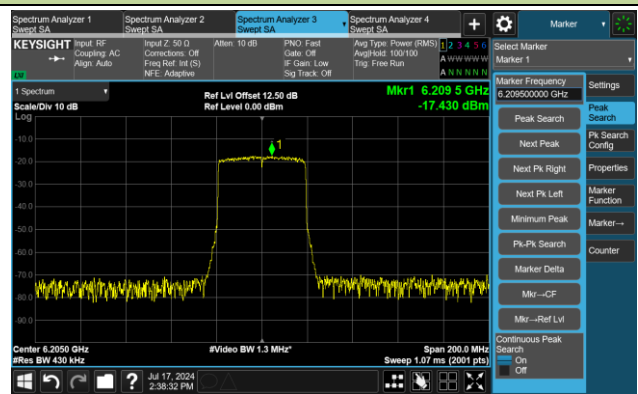


The Mask Data

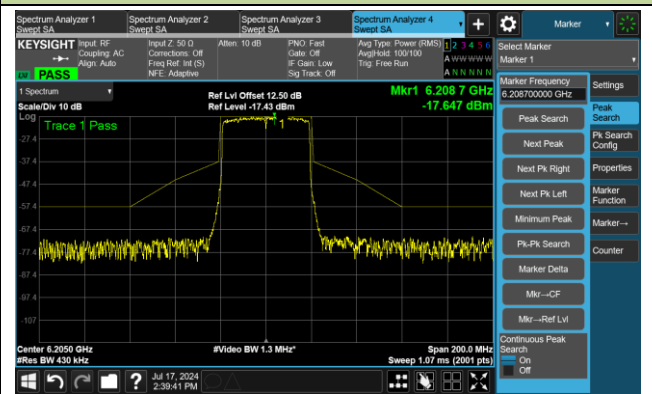 


802.11ax-HE40 – Ant 2

Channel 91 (6405MHz)

 The Reference Level

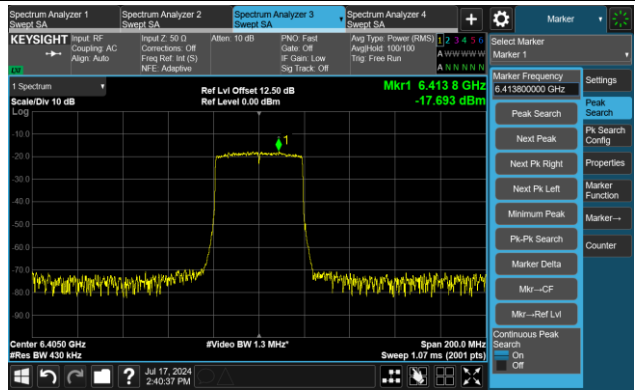


The Mask Data

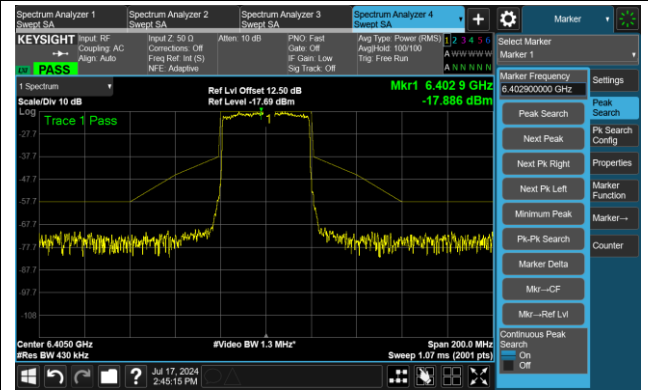 


Channel 99 (6445MHz)

 The Reference Level

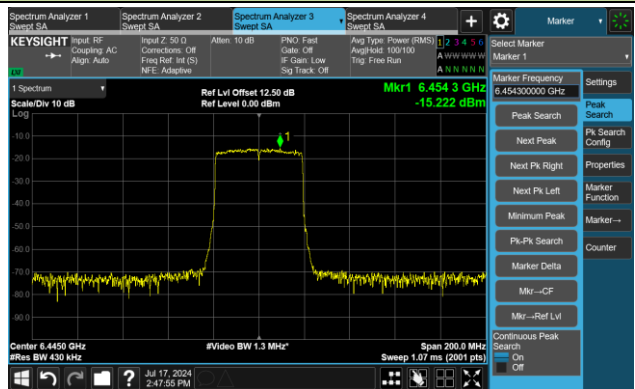


The Mask Data

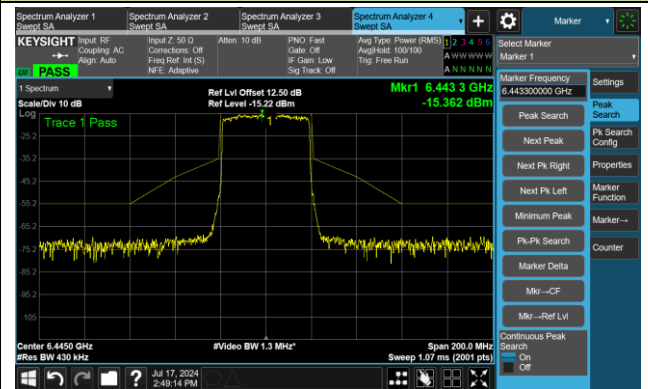 


Channel 107 (6485MHz)

 The Reference Level

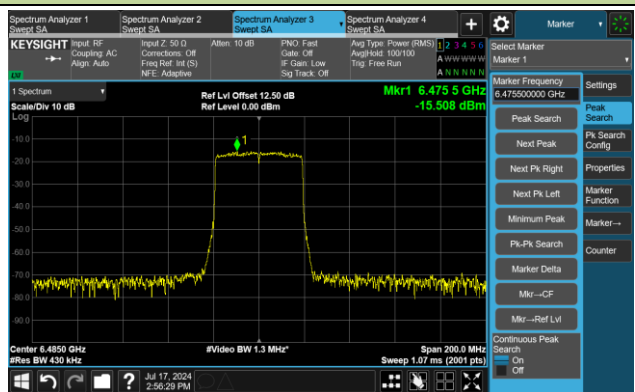


The Mask Data

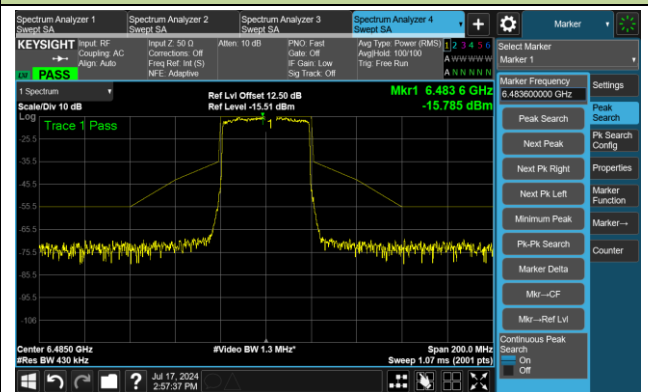 


802.11ax-HE40 – Ant 2

Channel 115 (6525MHz)

 The Reference Level

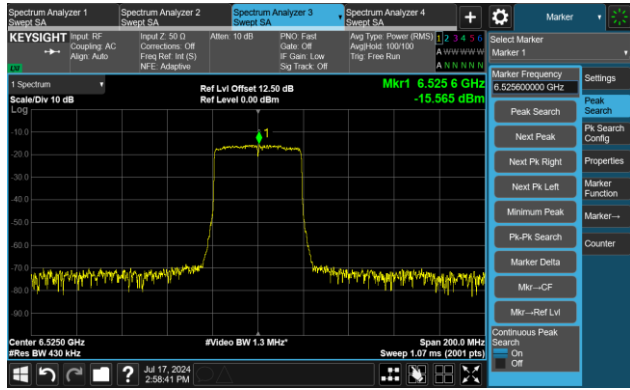


The Mask Data

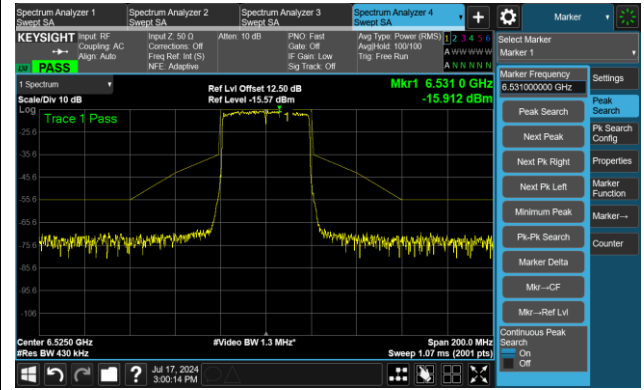 


Channel 123 (6565MHz)

 The Reference Level

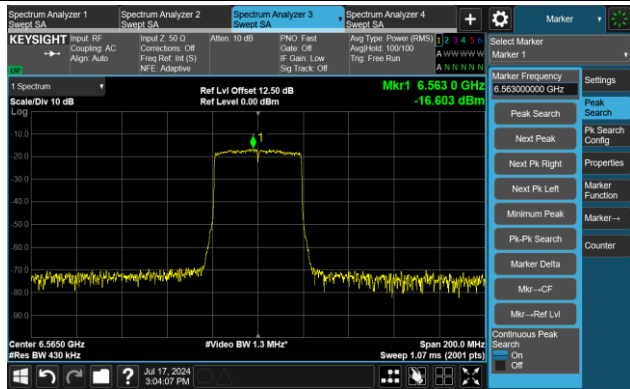


The Mask Data

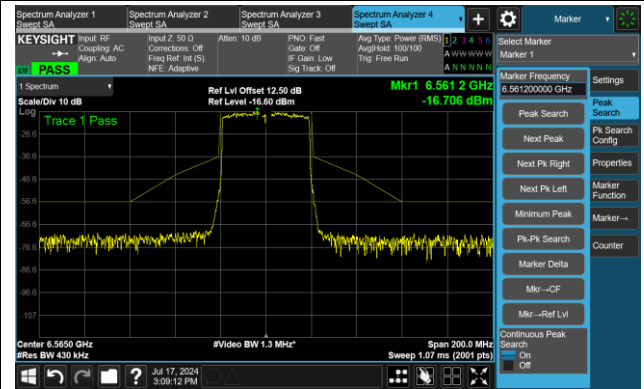 


Channel 147 (6685MHz)

 The Reference Level

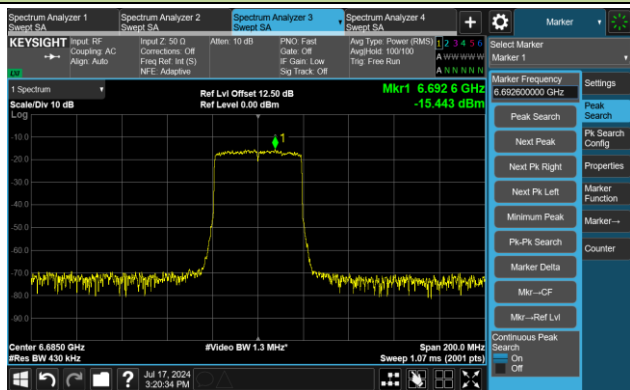


The Mask Data

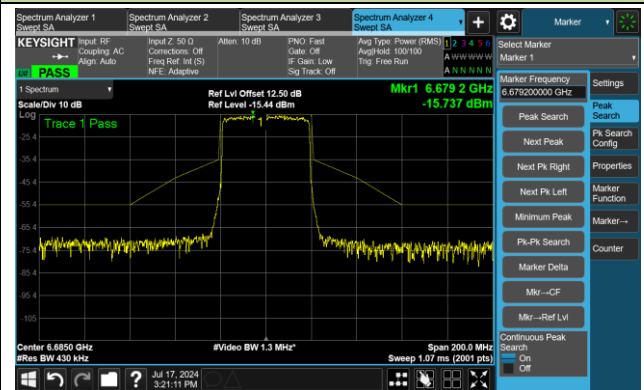 


802.11ax-HE40 – Ant 2

Channel 179 (6845MHz)

 The Reference Level

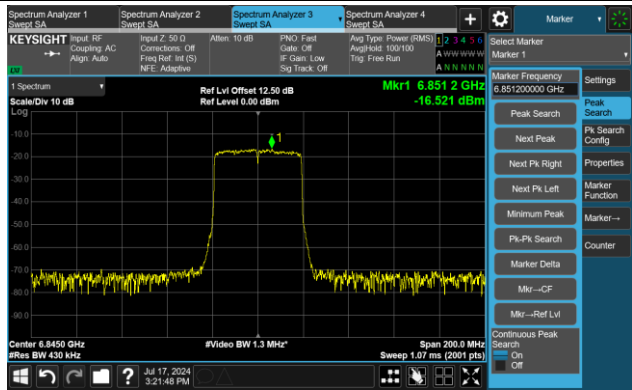


The Mask Data

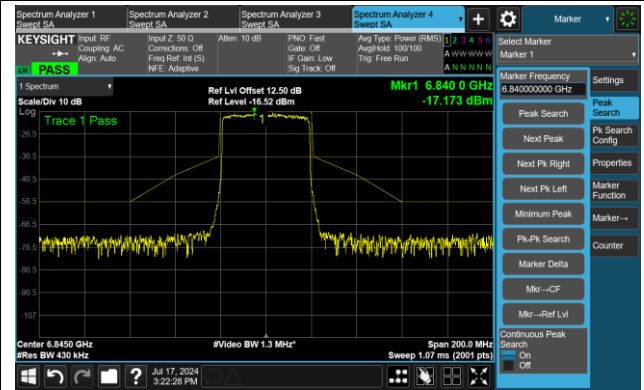 


Channel 187 (6885MHz)

 The Reference Level

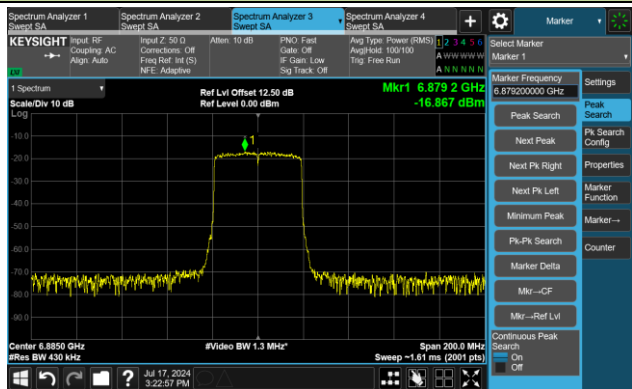


The Reference Level

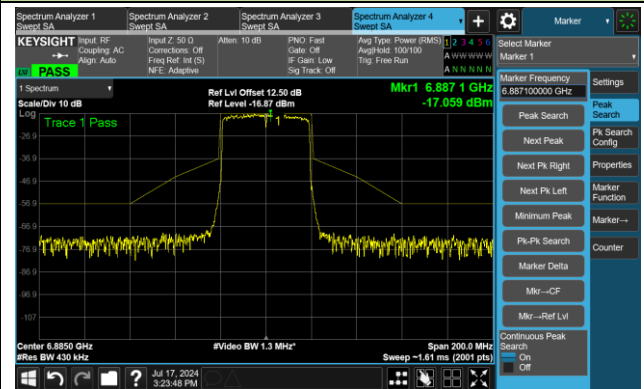 


Channel 195 (6925MHz)

 The Reference Level

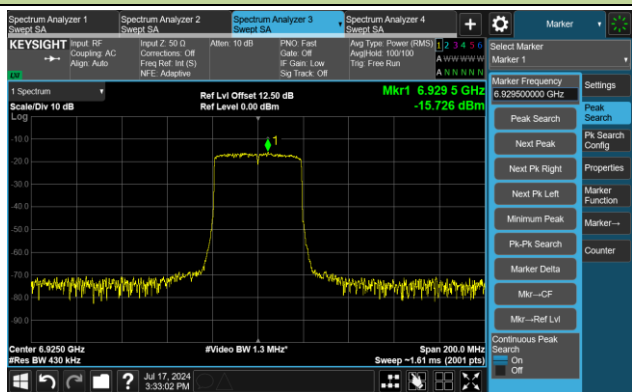


The Mask Data

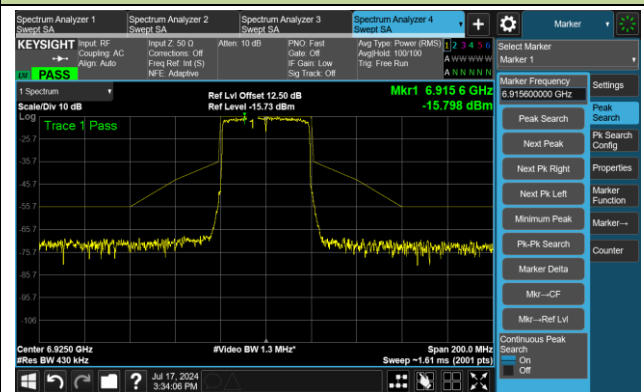 


802.11ax-HE40 – Ant 2

Channel 211 (7005MHz)

 The Reference Level

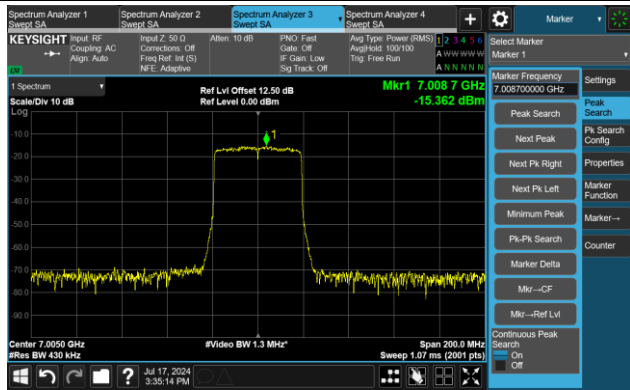


The Mask Data

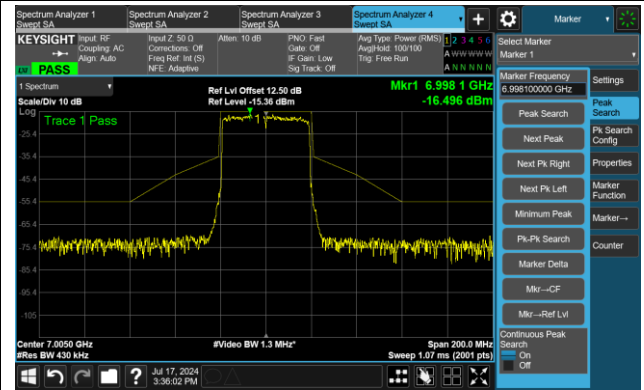 


Channel 227 (7085MHz)

 The Reference Level

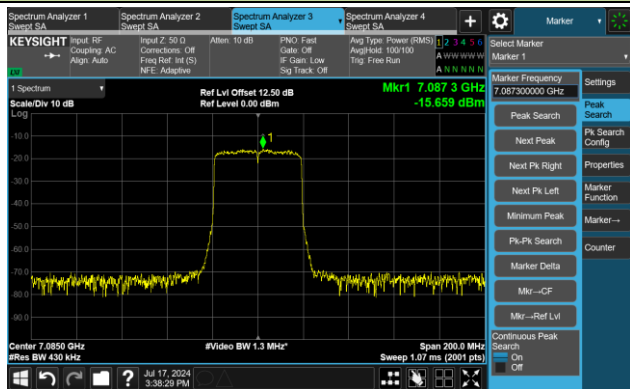


The Mask Data

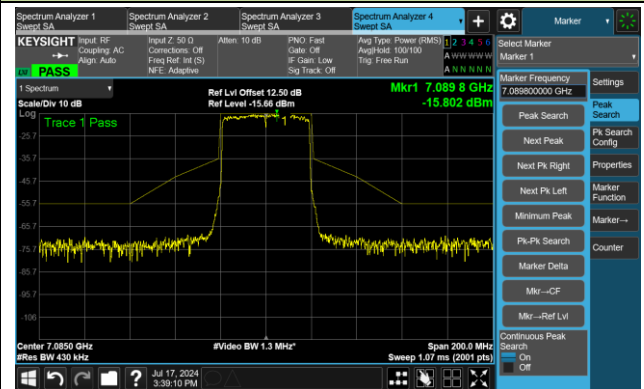 

802.11ax-HE80 – Ant 2

Channel 7 (5985MHz)

 The Reference Level

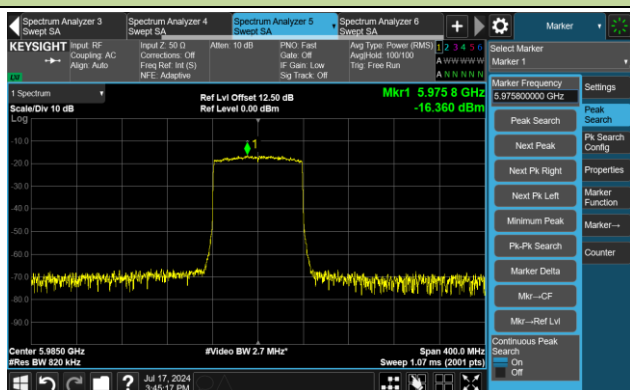

The Mask Data

